ZiiSOUND D5x

Model No.: MF8115

Congratulations on purchasing the ZiiSound D5x, the modular wireless speaker system that you will ever need. Get ready to experience a whole new definition of audio nirvana with one or more D5x or DSx wireless subwoofer linked together for dynamics rivalling the very best in home audio set-ups.

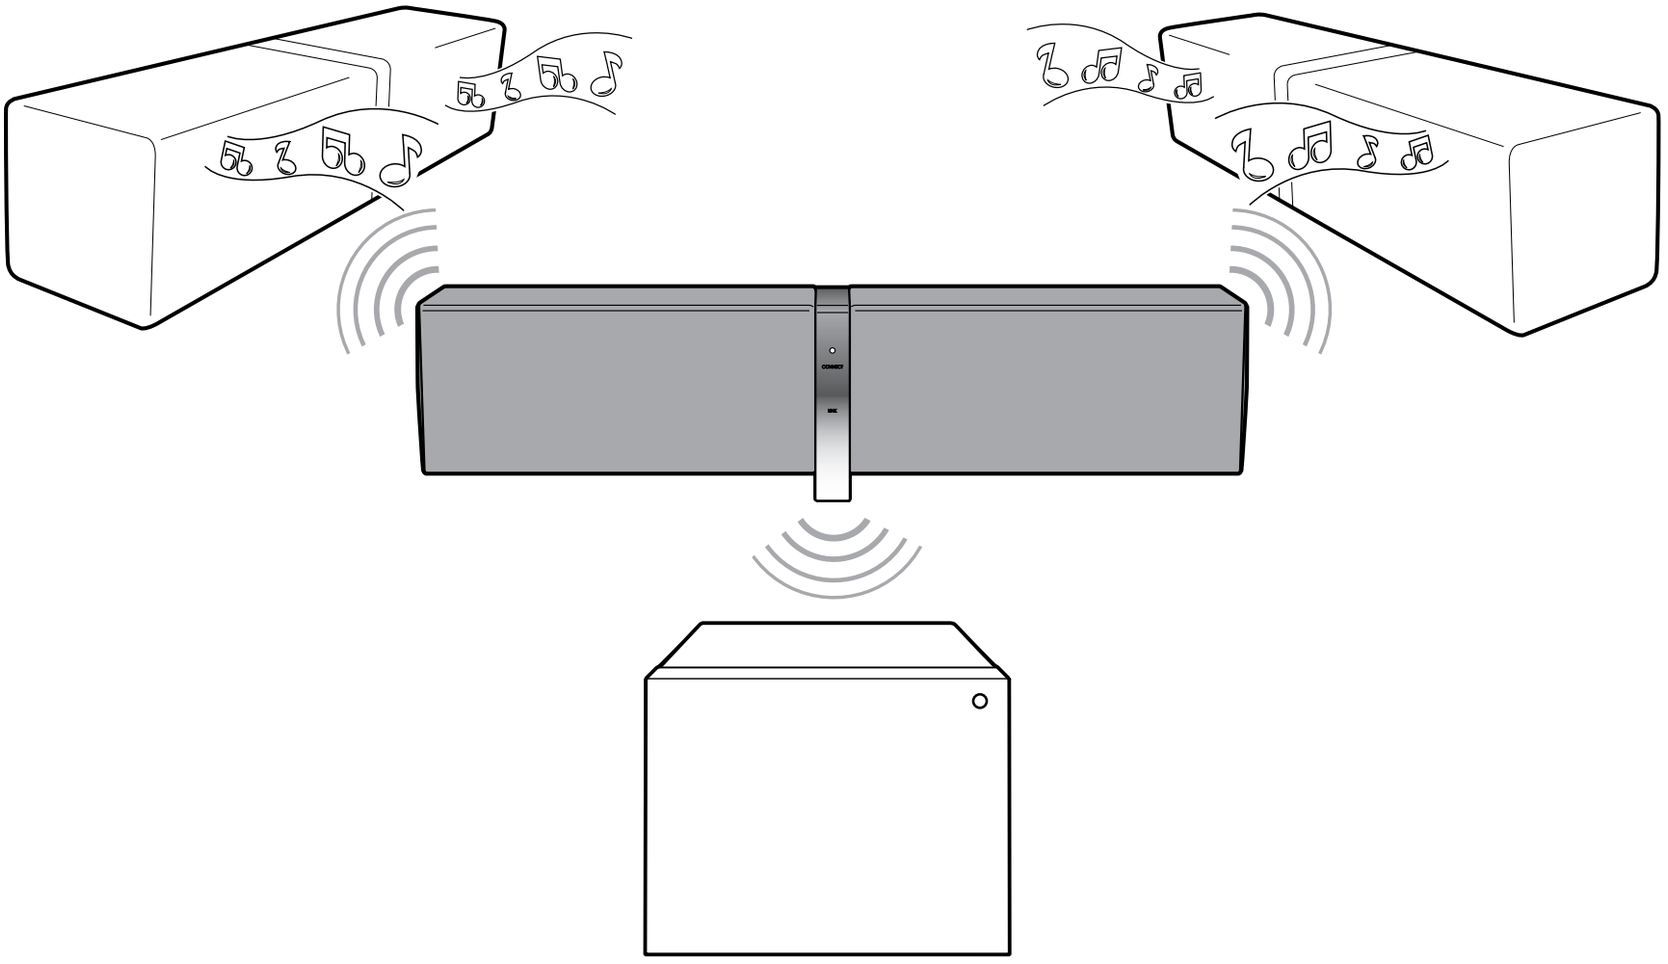

Additional ZiiSound D5x and ZiiSound DSx shown here and throughout the user manual are for illustration purposes only. Sold separately. Not included.

EN

For detailed product information, instructions or to find out more about our speakers, visit **www.creative.com/speakers**

Safety Instruction

Please read the following before using the Creative Products:

- Use a mains plug that is appropriate for your country or region.
- To be completely disconnected from the power input, the mains plug has to be disconnected /detached from the mains.
- Disconnect the mains plug when the device is expected to be unused for several days.

Additional guidelines for wireless devices

- The short wave radio frequency signals of a wireless device may impair the operation of other electronic and medical devices
- Switch off the device where it is prohibited. Do not use the device in medical facilities, aircraft, refueling points, close to automatic doors, automatic fire alarms or other automatically controlled devices
- Keep this device at least 20 cm from pacemakers and other medical devices. Radio waves may impair the operation of pacemakers and other medical devices

Technical Specifications

- *Bluetooth*® Version : *Bluetooth* 2.1 + EDR (Enhanced Data Rate)
- *Bluetooth* Operating Frequency : 2402 - 2480 MHz
- Supported *Bluetooth* profiles* : A2DP (Wireless Stereo *Bluetooth*)
  : AVRCP (*Bluetooth* Remote Control)
- Operating Range for *Bluetooth* : Up to 10 meters *(Measured in open space. Walls and structures may affect range of device.)*
- Operating Range for Wireless Link : Up to 30 meters *(Measured in open space. Walls and structures may affect range of device.)*
- Wireless Link Operating Frequency : 5725 – 5850 MHz
- Device Operating Temperature range : 0ºC to 45ºC
- Power Adapter Operating Temperature range : 0ºC to 40ºC

These specifications apply to the ZiiSound D5x operating from the supplied 15V DC 3.5A universal power adapter. The BT-D5 wireless transmitter is powered directly from the iPhone/iPod players. (DC 3.3v 100mA)

Note: Compliance markings are located on the bottom of this product.

Compatibility Disclaimer

- Wireless performance is dependent on your device's *Bluetooth* wireless technology. Refer to your device manufacturer's manual.
- Every electronic device is subjected to radio frequency (RF) interference from external sources. These include the connection between linked ZiiSound D5x and ZiiSound DSx wireless subwoofer.
- Creative will not be liable for any loss of data or leakage resulting from the use of these devices.

Notes

* Refer to your *Bluetooth* device (notebook[1], PC[1], mobile device[2]) manufacturer's documentation /website for supported profiles.

[1] Compatible with PC (Windows XP/Vista/7), Apple Macintosh computers equipped with *Bluetooth* wireless stereo

[2] Compatible with most major brands of *Bluetooth* A2DP enabled mobile phones. (including iPhone[3], Windows Mobile)

[3] Original iPhone built in *Bluetooth* not supported

1.1 Product Overview / Connectivity Diagram

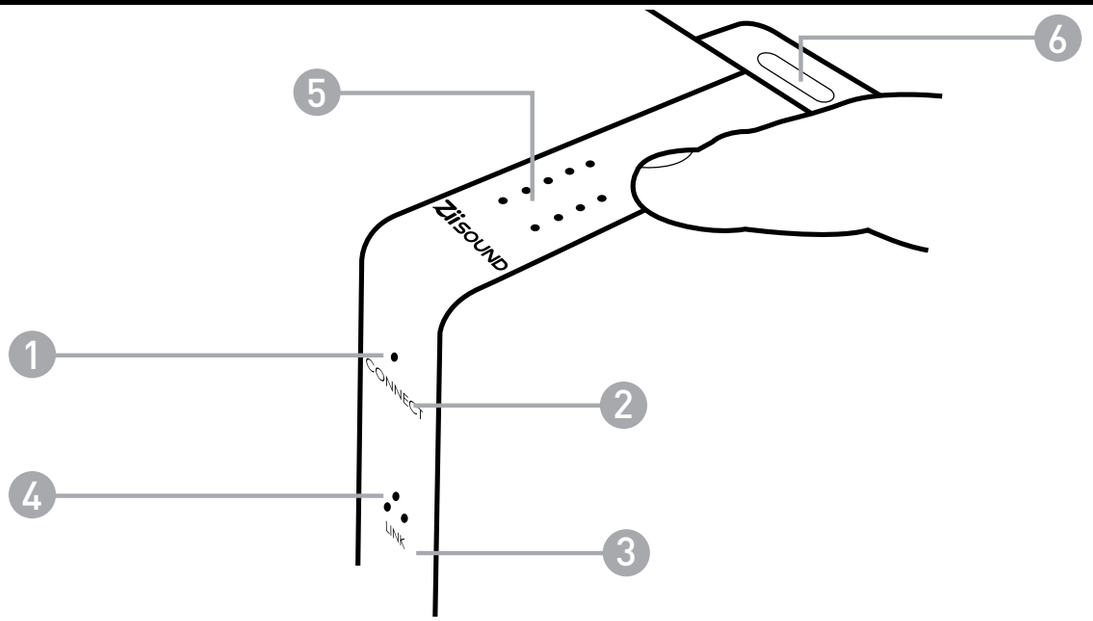

1	CONNECT LED Status Indicator	Pairing → Rapid blinking LED *Bluetooth* Connected → Steady Lit
2	CONNECT Touchpad / Button	For various *Bluetooth* Pairing activities
3	LINK TouchPad / Button	For various speakers linking activities
4	LINK LED Status Indicator	(Slave) Left Speaker (Slave/Master*) Center Speaker (Master) Right Speaker Link discoverable mode → Rapid blinking LED
5	Volume Touchpad / Button and Volume Led Status Indicator	
6	Transmitter Bay with EZ-Charge™	

* For a 1.1 setup, the ZiiSound D5x will light up the Center Speaker LED to indicate it is connected in a 1.1 setup.

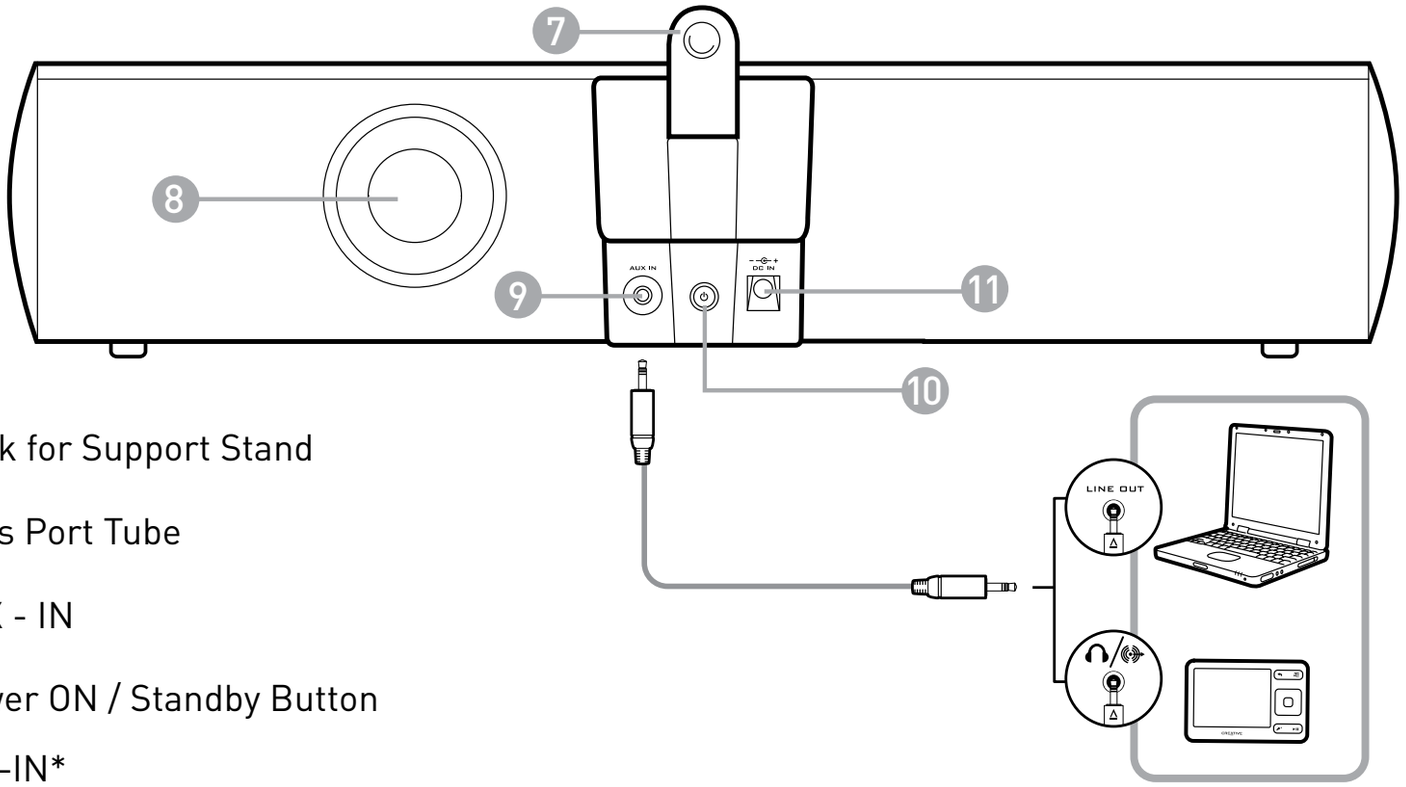

7 Dock for Support Stand

8 Bass Port Tube

9 AUX - IN

10 Power ON / Standby Button

11 DC –IN*

* All LEDs will light up for a few seconds when the mains are applied to the D5x. This is normal.

1.2 Overview of Wireless Transmitter

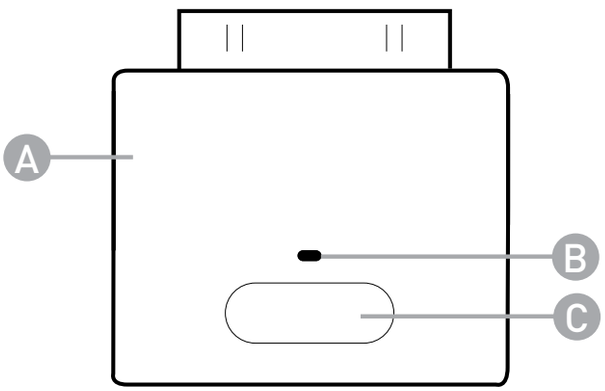

A **Wireless *Bluetooth* Transmitter (BT-D5)**
To be used with iPhone/iPod. See Table 1 for a list of compatible iPhone and iPod models.

B **Transmitter LED Status Indicator**
Blue LED blinks at different intervals to indicate wireless link status

C **Pairing Button**
Press and hold this to initiate various Wireless Transmitter pairing activities

1.3 Dock and charge your player

Select the Backrest adapter that best suits your player.

1	**iPhone 3GS** 8 GB 16GB 32GB **iPhone 3G** 8GB 16GB
2	**iPhone** 4GB 8GB 16GB
3	**iPod touch** 1st generation 8GB 16GB 32GB **iPhone 4** 16GB 32GB **iPod nano** 6th generation (video) 8GB 16GB
4	**iPod touch** 2nd generation 8GB 16GB 32GB **iPod touch** 3rd generation 32GB 64GB
5	**iPod nano** 4th generation (video) 8GB 16GB **iPod nano** 3rd generation (video) 4GB 8GB **iPod nano**** 5th generation (video) 8GB 16GB **iTouch** 4th generation 8GB 32GB 64GB
6	**iPod classic+** 80GB
7	**iPod classic+** 160GB (2007) **iPod classic+** 160GB (2009)

**Disclaimer: 5th Generation iPod FM radio function is not supported
+ iPod classic refers to the 6th Generation iPod or later

Table 1

A Insert backrest adapter fully into the support stand and ensure that it is secured

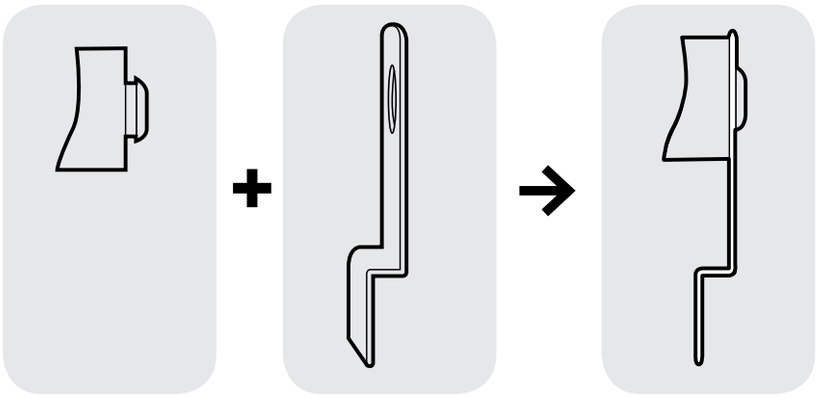

Backrest adapter

Support stand

B Insert the support stand into the dock located at the rear of the speaker

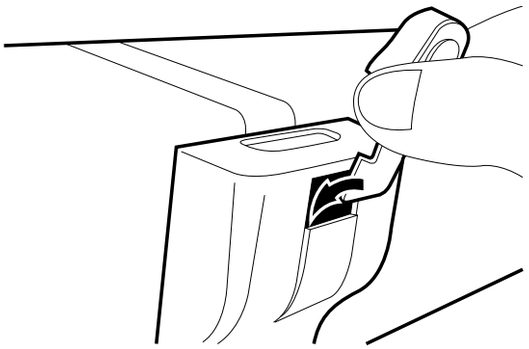

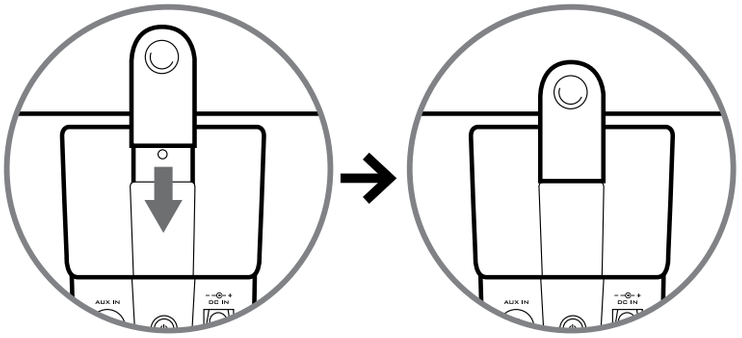

C You can now dock and charge your player

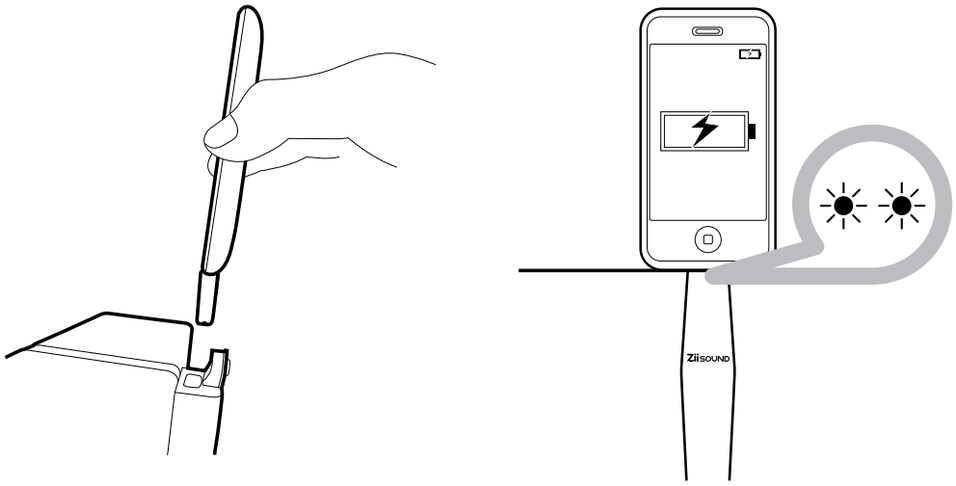

1.4 Enjoy audio from your iPhone/iPod via the *Bluetooth* wireless transmitter BT-D5

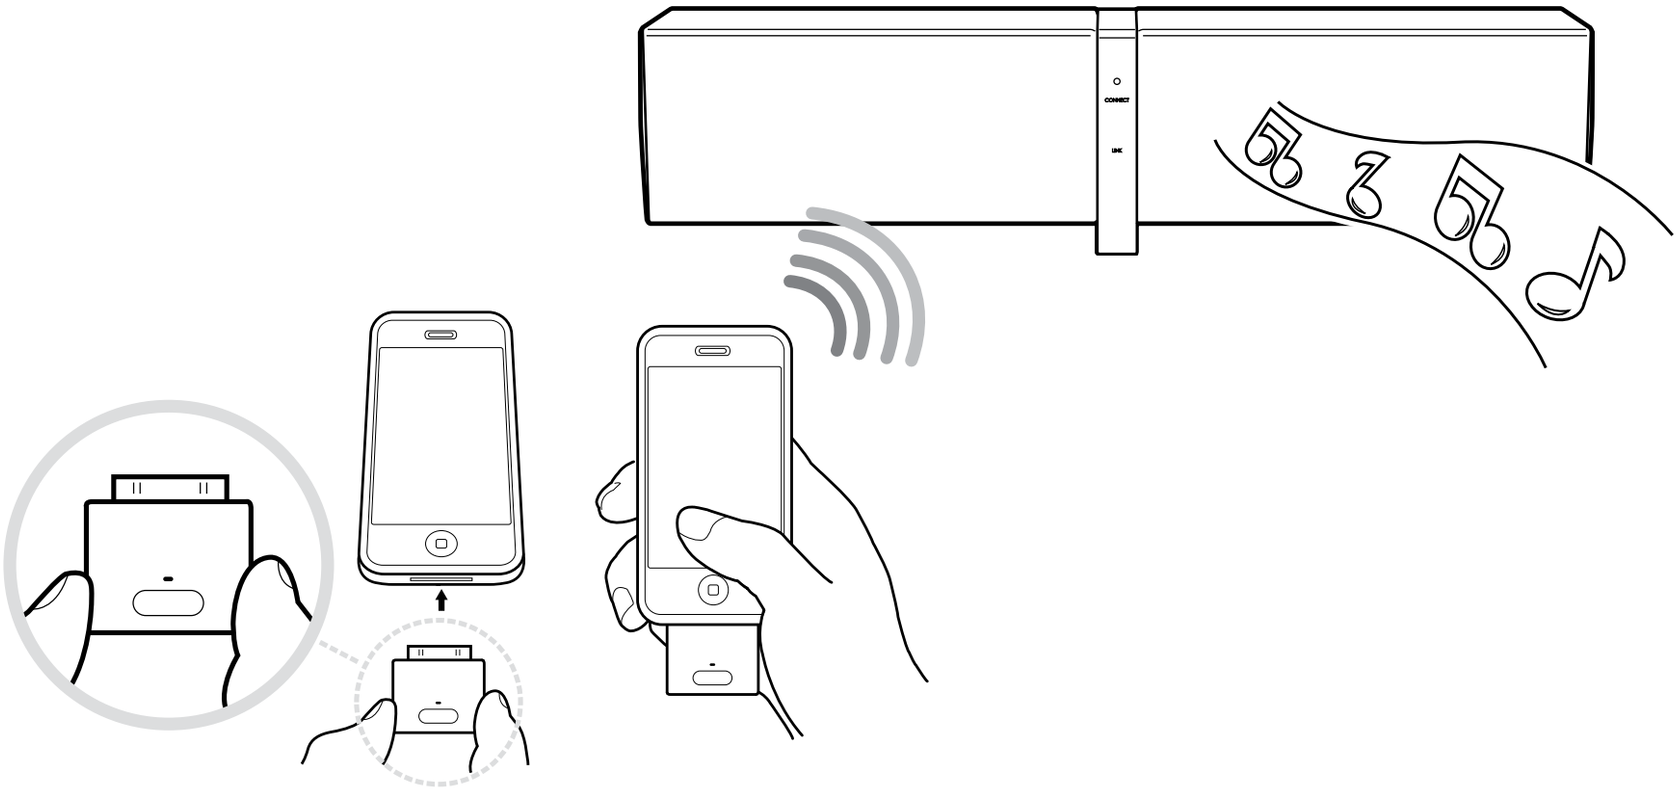

The *Bluetooth* wireless transmitter BT-D5 is paired with ZiiSound D5x at factory. Simply insert the BT-D5 into your iPhone/iPod to enjoy high quality wireless audio.

Action	LED status	Status
Power ON the speaker	Volume Touchpad / Button lit	Speaker is powered ON
Insert BT-D5 to your player	Transmitter LED blinks	Connection in progress
Wait for automated connection process to complete	CONNECT LED lit steady	Ready to stream music

1.5 Enjoy audio from Stereo *Bluetooth* devices

Enjoy your favourite music from other *Bluetooth* devices by following these steps to connect them.

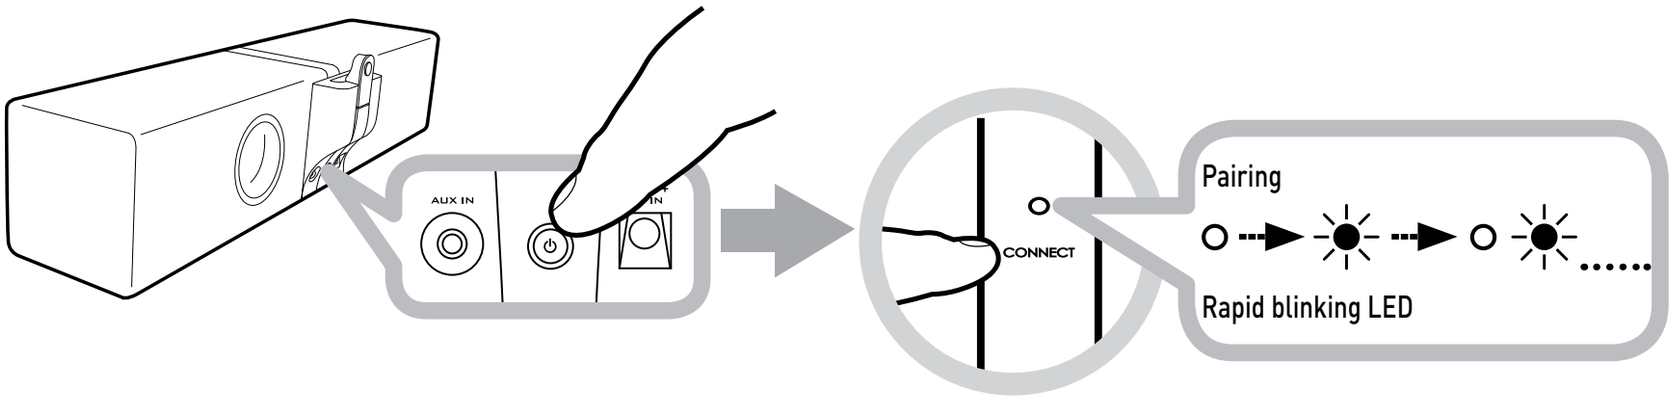

A Ensure the speaker is powered ON. Press and hold the "CONNECT Touchpad / Button for 5 seconds. Release when the CONNECT LED blinks once.

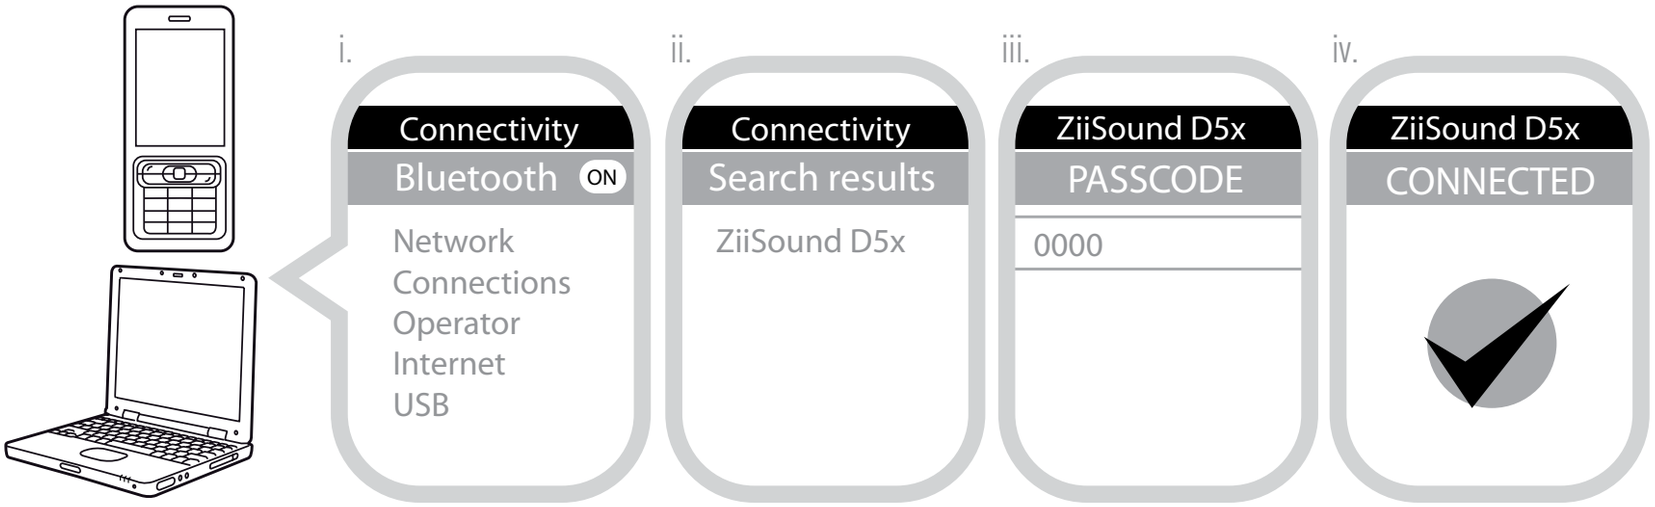

B
i) Turn on the *Bluetooth* feature on your device
ii) Search for ZiiSound D5x#
iii) Pair and connect to ZiiSound D5x#, if prompted for passcode, enter 0000.
iv) Pairing successful, ready to stream music

Note: The above are generic steps to pair a *Bluetooth* device, for more specific instruction on *Bluetooth* connectivity for your device, please consult your manufacturer's manual.
When pairing a *Bluetooth* device to a Linked speaker system in 1.1, 2.1 or 3.1 configuration, the Linked speaker system will appear as "ZiiSound D5x System"

1.6 Re-pairing with your iPhone/iPod via the Wireless Transmitter BT-D5

Follow these steps if there is a need to re-pair your iPhone/iPod via BT-D5 to the ZiiSound D5x.

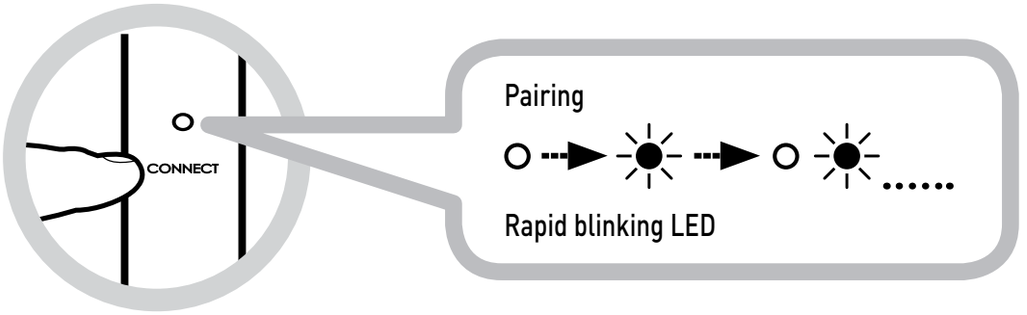

A Ensure the speaker is powered ON. Press and hold the "CONNECT Touchpad / Button for 5 seconds. Release when the CONNECT LED blinks once.

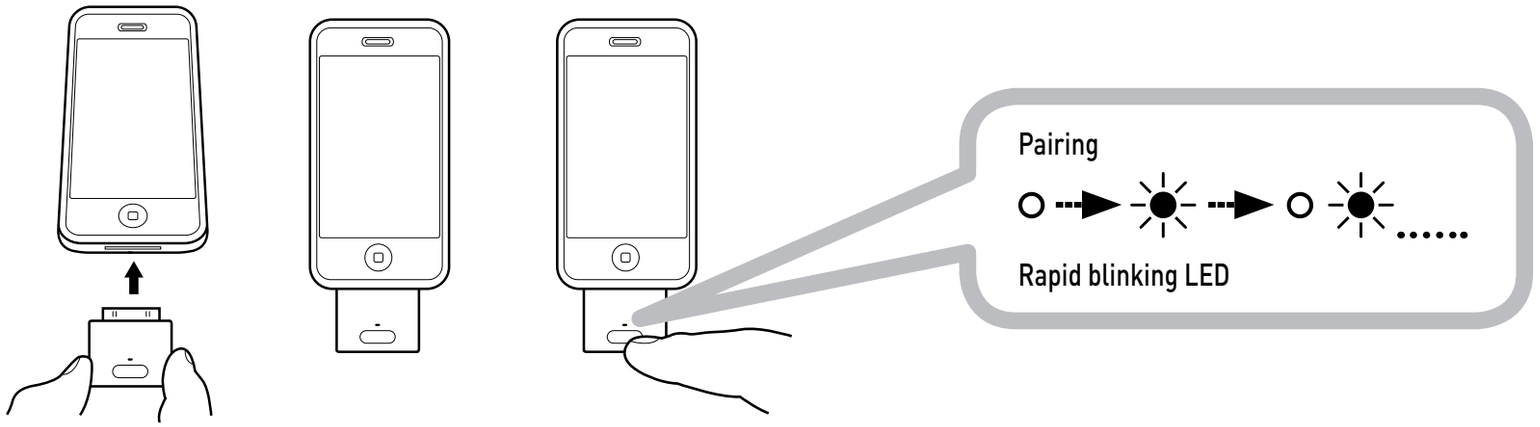

B Insert BT-D5 into your iPhone/iPod. Wait for the Transmitter LED to start blinking. Now Press and hold the "PAIRING Button" for 3 Seconds and release when the transmitter LED is rapidly blinking.

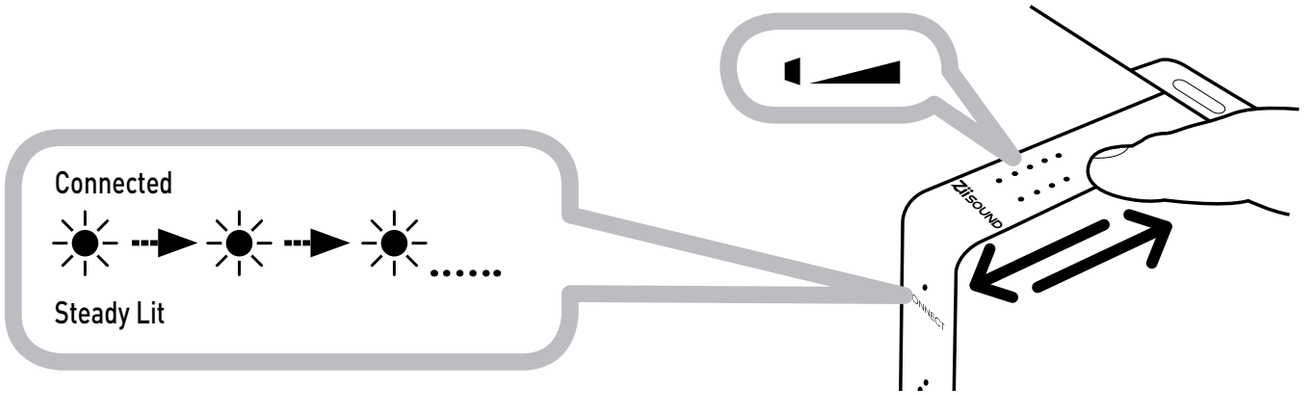

C Wait for automatic connection process to complete. CONNECT LED should be steady lit. Ready to stream music.

1.7 Switching between paired devices

Enjoy your favourite music from another paired *Bluetooth* device by following these steps to establish the connection.

Action	LED status	Status
–	–	Ensure that the next previously paired device has *Bluetooth* powered on and ready to accept connection
Press “CONNECT Touchpad / Button” once	CONNECT LED blinks and stays lit	*Bluetooth* connection switches. Ready to stream music.

Section 2 : Linking with another ZiiSound D5x or DSx Wireless subwoofer

2.1 Adding a subwoofer to the D5x to form a 1.1 speaker system

A **Note**: It is neccessary to clear the memory of linked speakers (all D5x(s) and DSx) should you require to configure a new setup. (For example, adding another D5x or DSx)

Proceed to Step (b) if your D5x or DSx have not been linked with other speaker before.

If your D5x or DSx have been linked before, follow the instruction below to clear link system memory to reconfigure a new speaker setup.

For the D5x(s)
Ensure the speaker is in standby mode. Press and hold the Power ON/ Standby button located at the rear of the speaker until LINK and CONNECT LED blinks 2 times and goes off. The D5x Link memory has been cleared.

For the DSx
Press and hold the LINK Button located at the rear of the subwoofer for 10 seconds until the Link LED blinks 2 times and goes off. The DSx Link memory has been cleared.

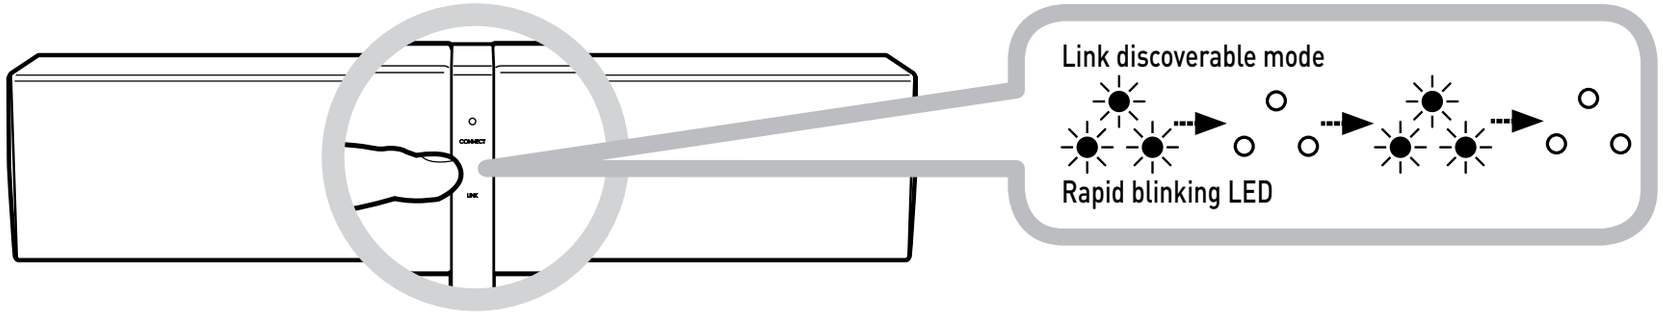

B Ensure your ZiiSound D5x is Powered ON.
Press and hold the LINK Touchpad / Button for 5 seconds and release when the Link LED blinks once. The D5x is now in Link discoverable mode.

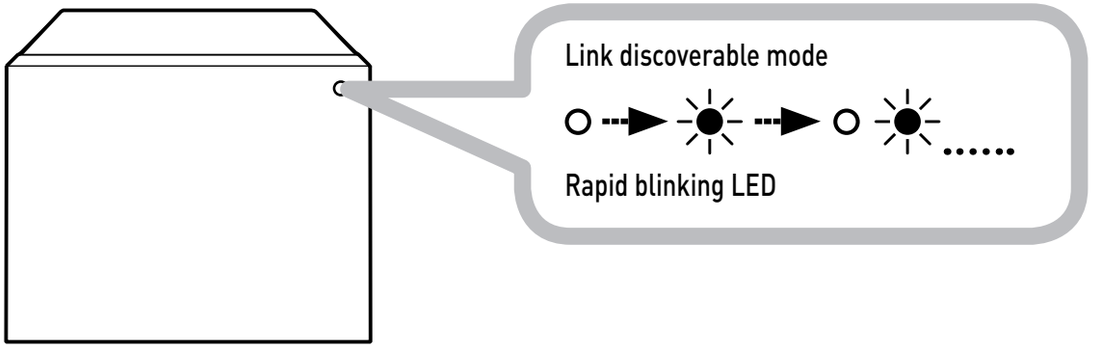

C Activate LINK discoverable mode on the ZiiSound DSx wireless subwoofer by holding the Link button for 4 seconds and releasing when the Link LED blinks once.

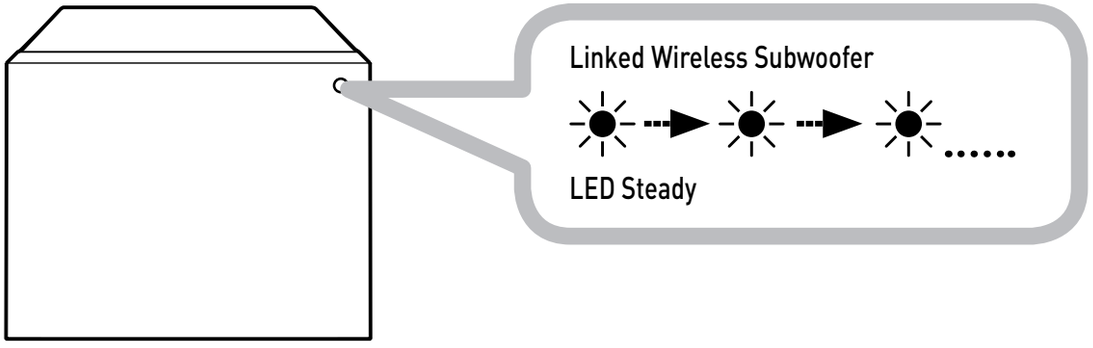

D The ZiiSound DSx are linked when the LED status indicator on the DSx are Lit Steady.

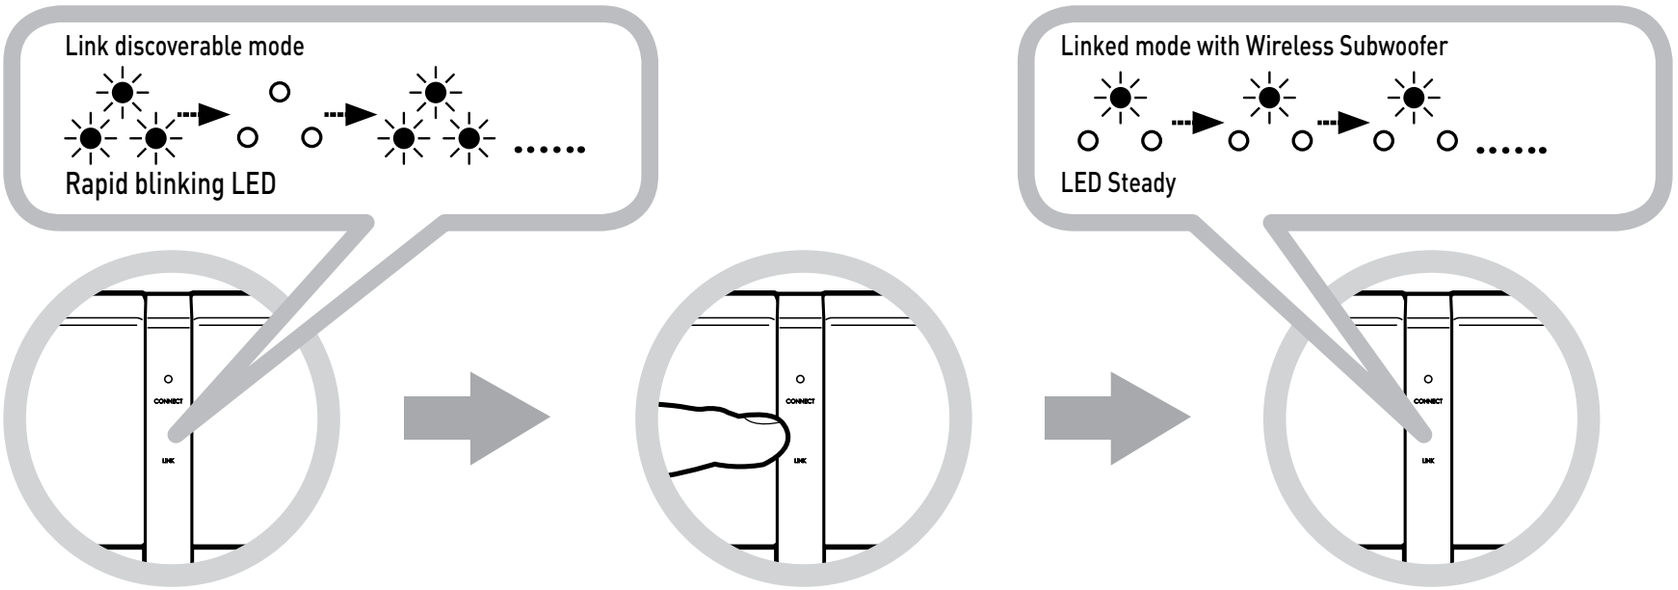

E If the ZiiSound D5x LINK LED is still Rapidly Blinking, Press the LINK Touchpad / Button once to stop or wait for it to timeout. Link establishment complete. Ready to Stream music.

2.2 Adding one or more ZiiSound D5x and DSx wireless subwoofer to form a 2.1 or 3.1 speaker system

A **Note**: It is neccessary to clear the memory of linked speakers (all D5x(s) and DSx) should you require to configure a new setup. (For example, adding another D5x or DSx)

Proceed to Step (b) if your D5x or DSx have not been linked with other speaker before.

If your D5x or DSx have been linked before, follow the instruction below to clear link system memory to reconfigure a new speaker setup.

For the D5x(s)
Ensure the speaker is in standby mode. Press and hold the Power ON/ Standby button located at the rear of the speaker until LINK and CONNECT LED blinks 2 times and goes off. The D5x Link memory has been cleared.

For the DSx
Press and hold the LINK Button located at the rear of the subwoofer for 10 seconds until the Link LED blinks 2 times and goes off. The DSx Link memory has been cleared.

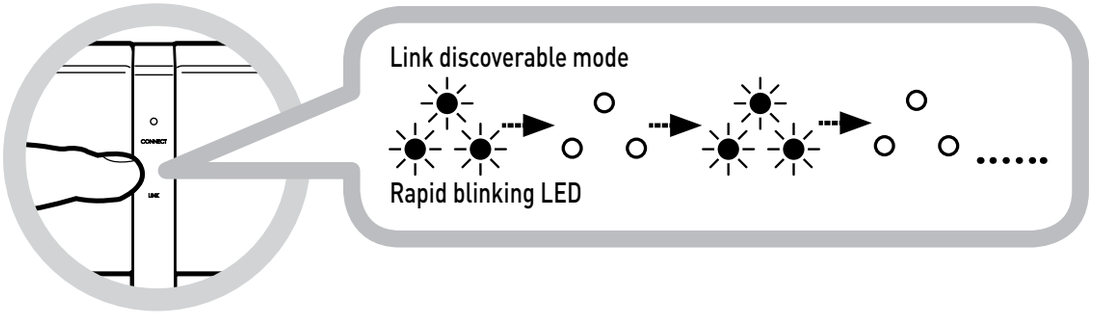

B Pick one ZiiSound D5x as your master speaker and ensure it is powered ON.
Press and hold the LINK Touchpad / Button for 5 seconds and release when the LINK LED blinks once. The D5x is now in Link discoverable mode and will be your RIGHT Channel Speaker.

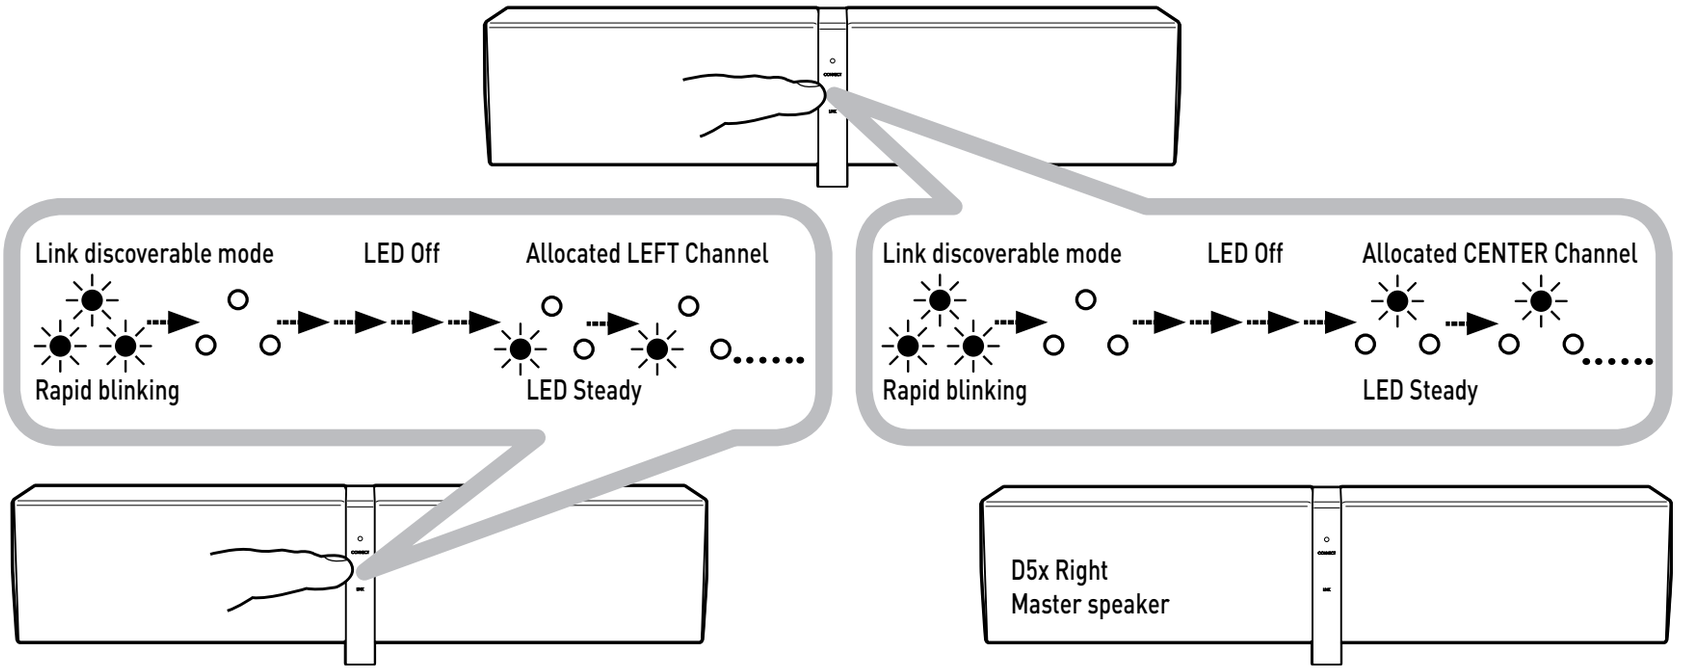

C Power ON another D5x. Press and hold the LINK Touchpad / Button for 5 seconds and release when the LINK LED blinks once. The LINK LED will blink until it stays lit up to indicate which channel the speaker is linked for. Repeat for another D5x to form a 3.1 setup.

The Speakers will automatically be allocated as LEFT, then CENTER channels by order of the activation of their Link Discoverable mode.

Note:

- When a new speaker is added to the RIGHT Channel Master speaker, the LINK discoverable mode for the Master speaker extends for another 1 minute for other speakers to link in.
- To cancel Link discoverable mode, press the LINK Touchpad / Button once while the speakers / Subwoofer are still in Link discoverable mode.

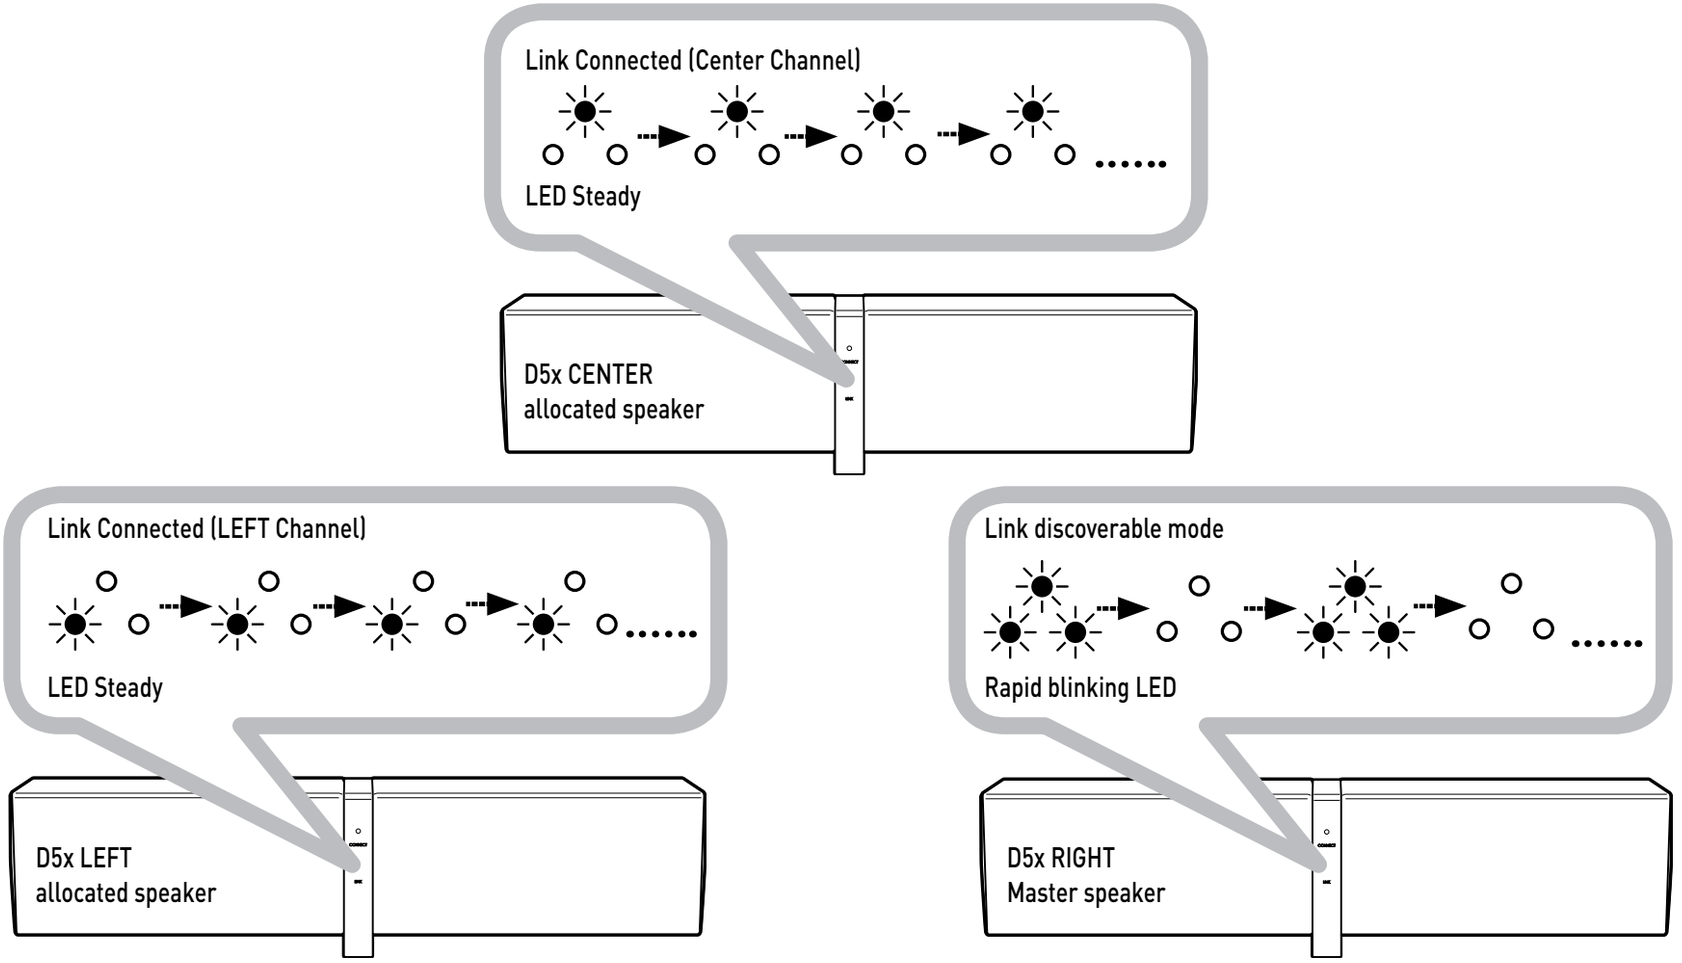

D LEFT and CENTER speakers are Linked when the LINK LED Status indicator of the LEFT and CENTER channel speakers shows their respective LEFT and CENTER LED Lit on its LINK LED.

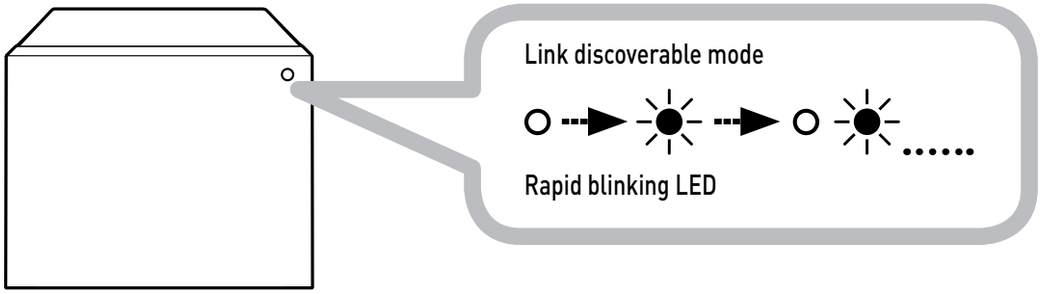

E Jump to step Ⓖ should no wireless subwoofer are required to be linked.

Set the ZiiSound DSx wireless subwoofer to LINK Discoverable mode by holding the Link button for 5 seconds and releasing when the Link LED blinks once. For detailed instructions, refer to the ZiiSound DSx User manual. The Master D5x speaker will automatically connect the DSx wireless subwoofer while the D5x LINK LED is still rapidly blinking.

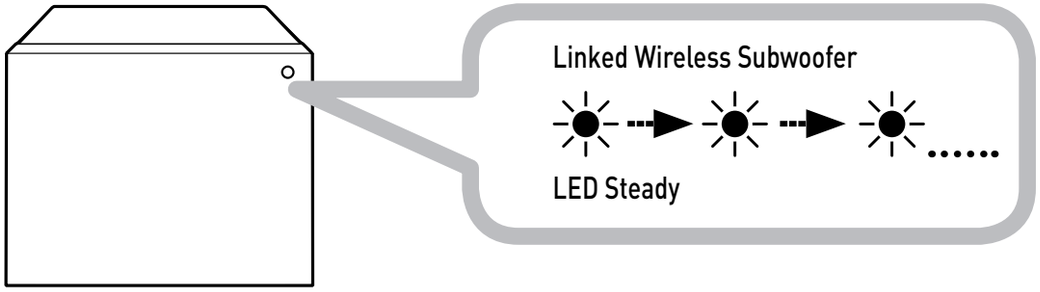

F The ZiiSound DSx are linked when the LED status indicator on the DSx are Lit Steady.

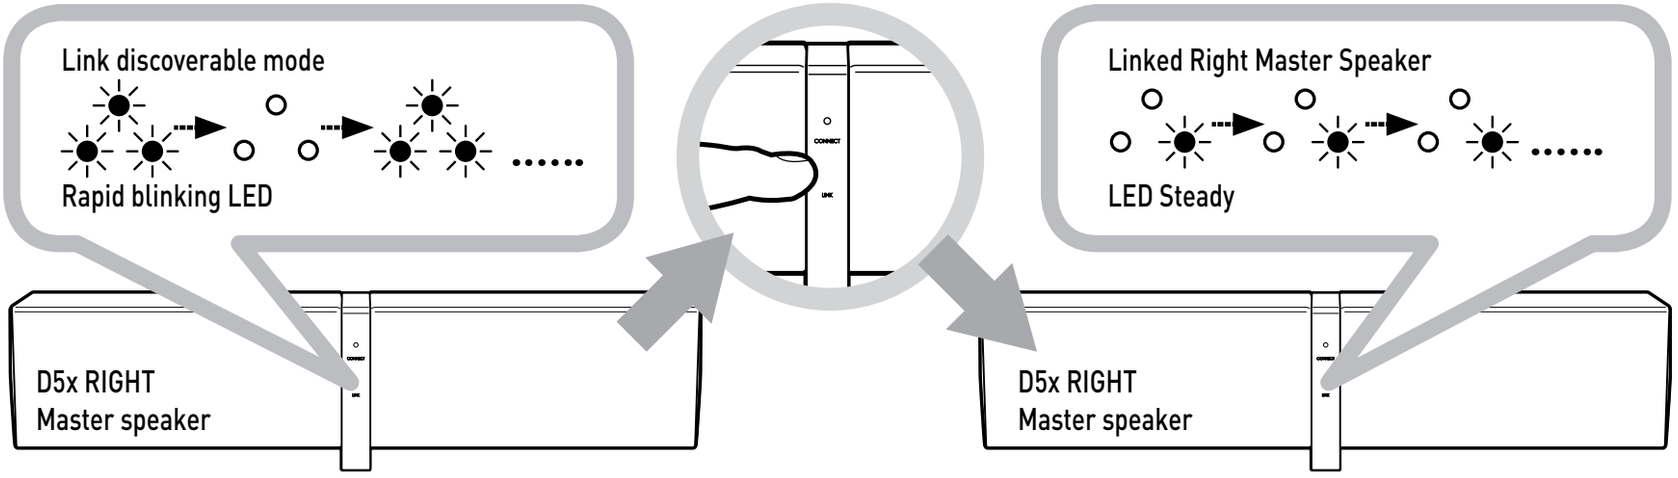

G If the ZiiSound D5x (Right Channel) Master speaker LINK LED is still Rapidly Blinking, Press the LINK Touchpad / Button once to stop or wait for it to timeout. The speakers are now in Multi Channel mode. Link establishment complete. Ready to Stream music.

Note:
1) The Link feature on this D5x is only compatible with other ZiiSound D5x speakers and ZiiSound DSx wireless subwoofer.
2) Volume control, AUX-IN, CONNECT Touchpad and Volume Touchpad / Button operations are not available for the LEFT and CENTER Channels when the LINK is active.

Section 3 : Switching between MULTI-CHANNEL and PARTY mode

3.1 To engage PARTY Mode

In PARTY mode, each individual speaker will broadcast its LEFT, RIGHT channels information from the RIGHT Master speaker. This switching feature can only be performed on the RIGHT Master speaker when in MULTI-CHANNEL mode.

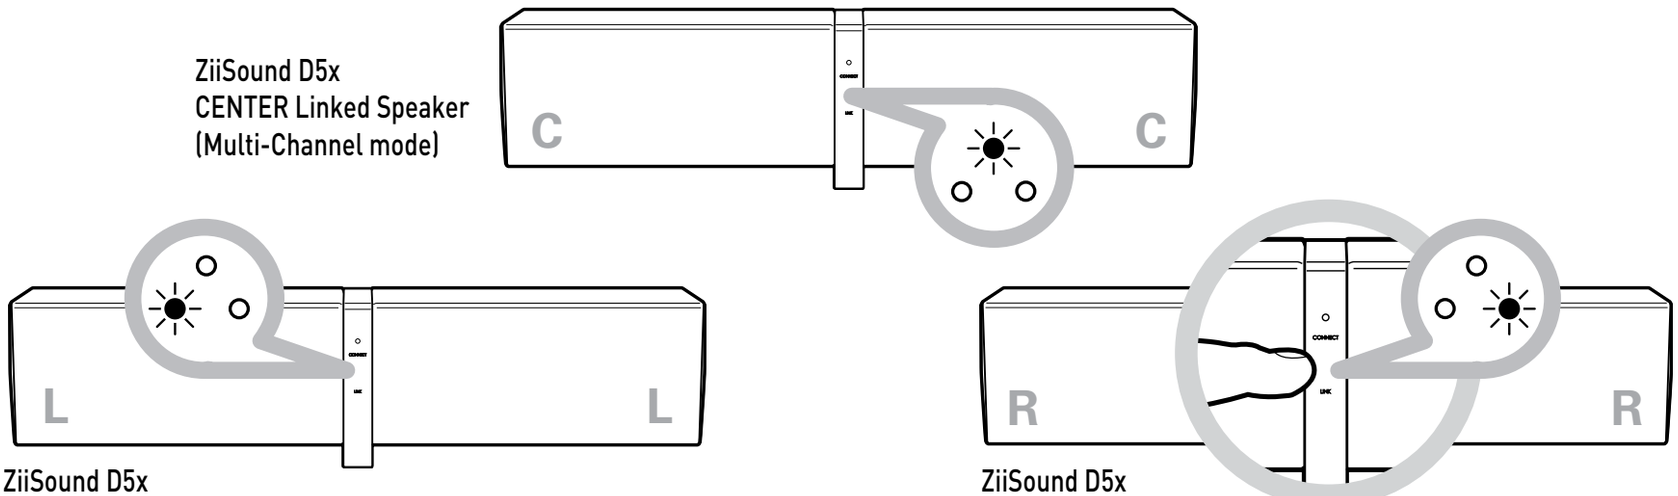

ZiiSound D5x
CENTER Linked Speaker
(Multi-Channel mode)

ZiiSound D5x
LEFT Linked Speaker
(Multi-Channel mode)

ZiiSound D5x
RIGHT Linked Speaker
(Multi-Channel mode)

A Press and hold the LINK TouchPad / Button for 5 seconds and release when the LINK LED blinks once. Now all LED on the LINK LED status indicator will light up, indicating they are in PARTY mode configuration.

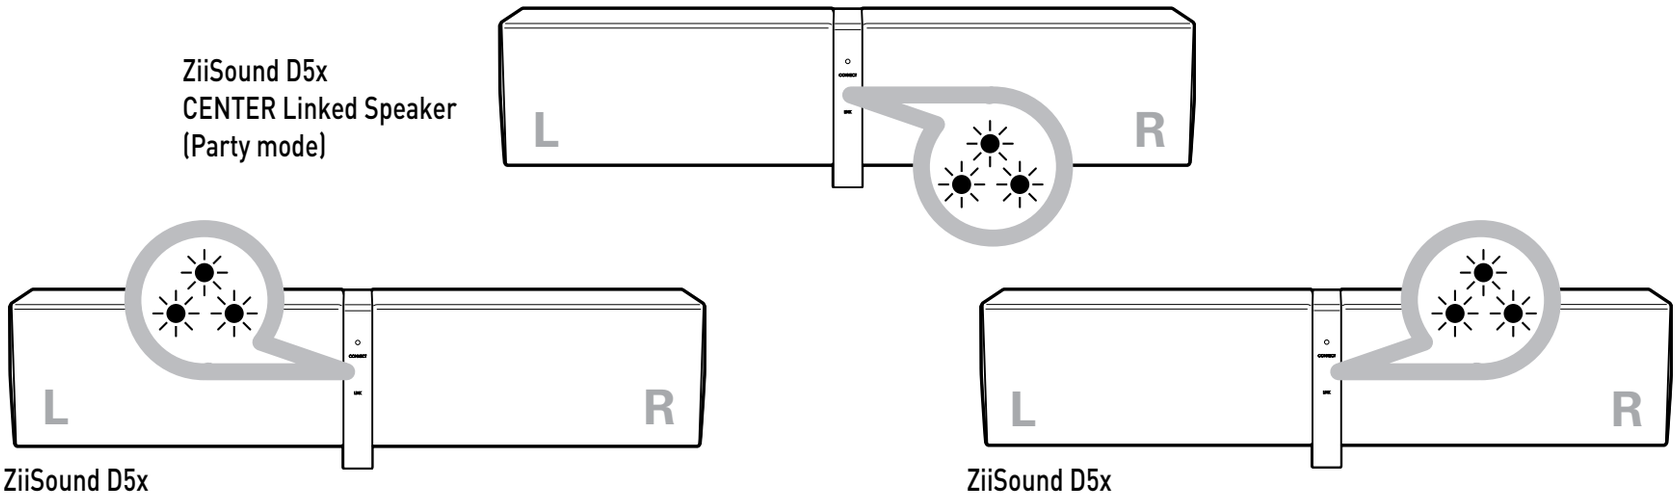

ZiiSound D5x
CENTER Linked Speaker
(Party mode)

ZiiSound D5x
LEFT Linked Speaker
(Party mode)

ZiiSound D5x
RIGHT Linked Speaker
(Party mode)

3.2 To engage MULTI CHANNEL Mode

In MULTI-CHANNEL mode, each individual speaker will play only its allocated channel information (eg LEFT, CENTER or RIGHT only) streamed from the RIGHT Master speaker. This switching feature can only be performed on the RIGHT Master speaker when in PARTY mode.

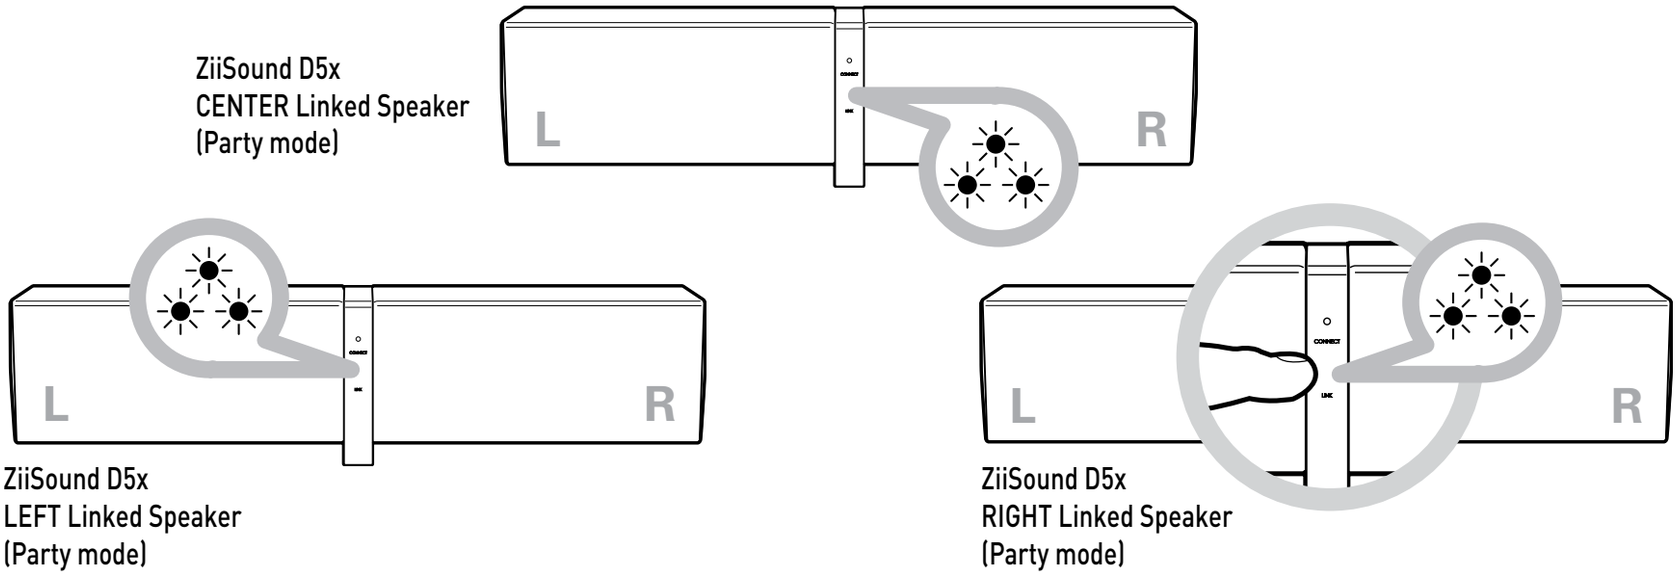

ZiiSound D5x
CENTER Linked Speaker
(Party mode)

ZiiSound D5x
LEFT Linked Speaker
(Party mode)

ZiiSound D5x
RIGHT Linked Speaker
(Party mode)

A Press and hold the LINK TouchPad / Button for 5 seconds and release when the LINK LED blinks once. Now all LED on the LINK LED status indicator will disappear, only displaying their respective Channel LED indicator indicating they are in MULTI-CHANNEL mode.

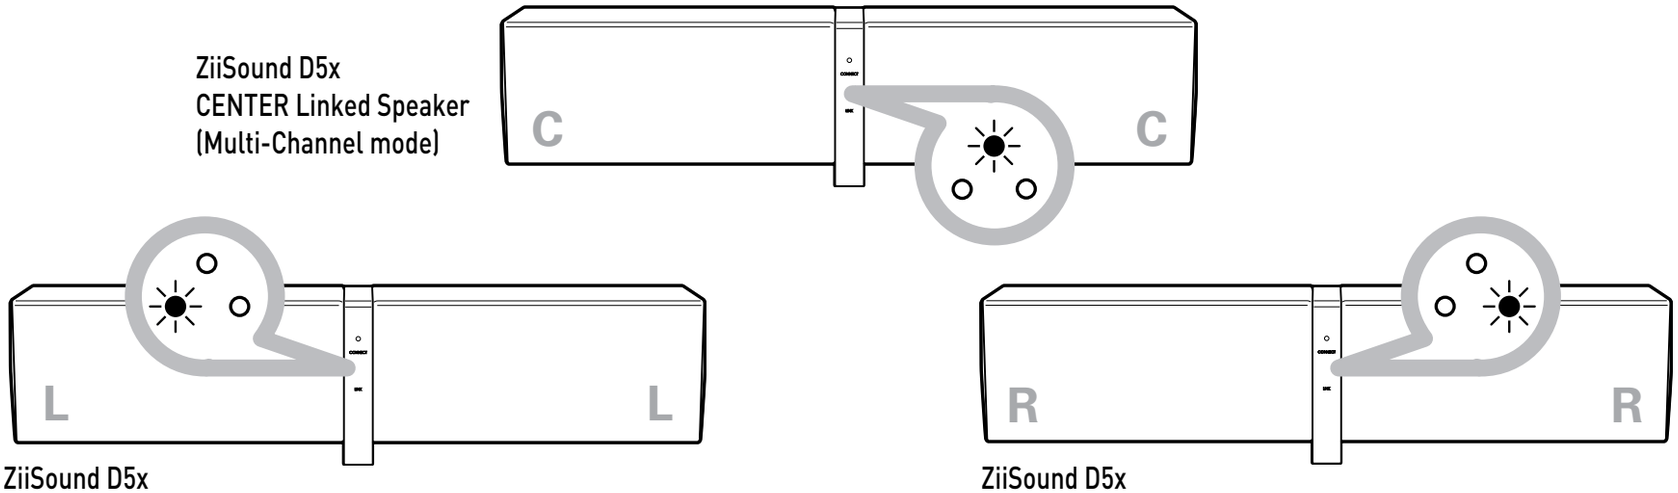

ZiiSound D5x
CENTER Linked Speaker
(Multi-Channel mode)

ZiiSound D5x
LEFT Linked Speaker
(Multi-Channel mode)

ZiiSound D5x
RIGHT Linked Speaker
(Multi-Channel mode)

4.1 Returning to standby and Powering ON the D5x with active Links

A **Returning to Standby**
The Linked speakers can be brought to Standby in unison by pressing the Power ON/Standby Button located at the rear of the RIGHT Master speaker.

B **Powering ON with active links**
The Linked speaker can be Powered ON with active links to each other by pressing the Power ON/Standby Button of the RIGHT Master speaker with the mains powered ON on all the other speakers.*

*Powering ON with active links can only be done on the Master speaker as the slave speakers are listening to instructions from the Master speaker, even in standby.

4.2 Disabling / Restoring the link system for Standalone/ Linked speaker usage (only for 2.0 and above setup)

A **Disabling the LINK for individual D5x operation**
You can disable the LINK connection to all the linked speakers by simply pressing the LINK Touchpad / Button once on the RIGHT Master speaker. This will bring down the LINK and restore the functions of the Volume control, AUX-IN, CONNECT Touchpad and Volume Touchpad / Button, which locked in link mode, back to each individual D5x. Once activated, there is no LED indication on the LINK LED status indicator for all D5x.

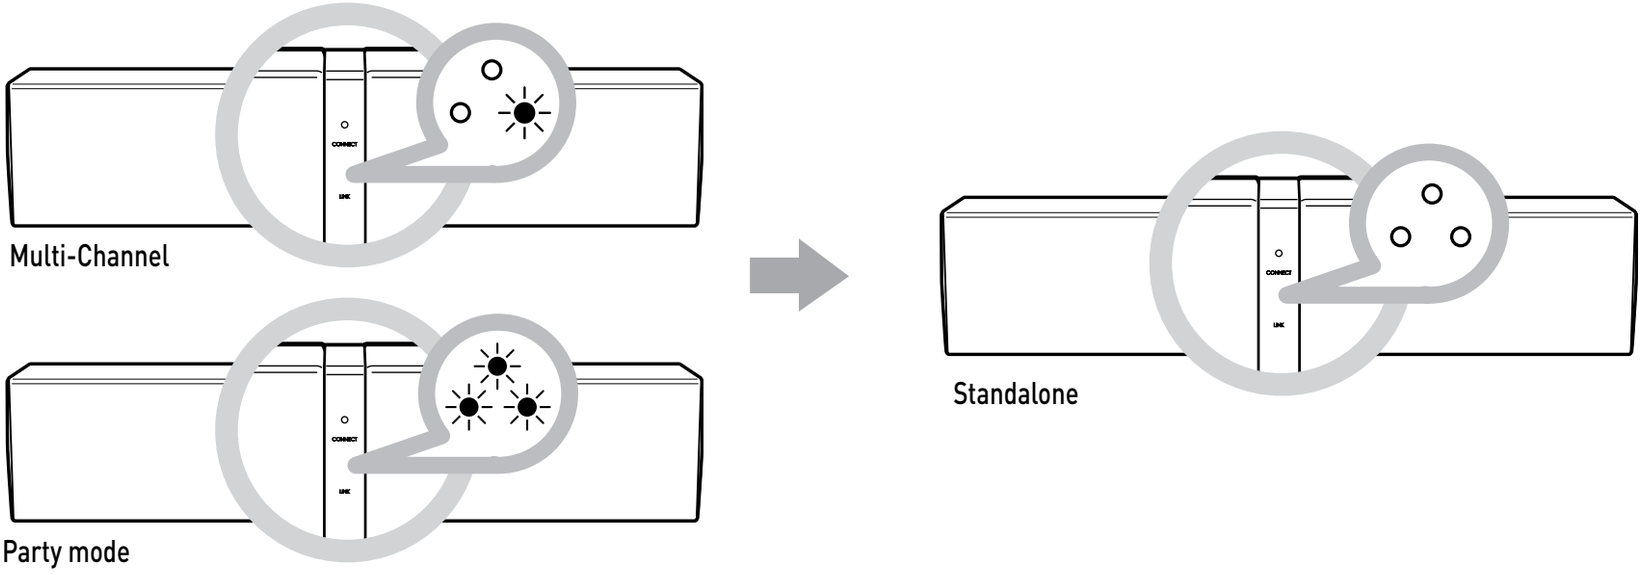

B **Restoring LINK for linked speaker usage**
To restore the LINK from the sets of individual speakers, you can Press the LINK Touchpad / Button once on either any of the speakers with all other D5x(s) and subwoofer Powered ON**. This will result in restoring the state of the speakers shown by it LED indication in either Multi-channel or Party mode.

** For the ZiiSound D5x, Powered ON is indicated with the Volume LED Status Indicator lit up.

4.3 Reset to factory setting / clear Link system

Follow these steps to return to factory settings all D5x(s) to clear *Bluetooth* paired device memory and Link system memory when a change of speaker configuration is required (For example, linking additional D5x or DSx)

Action	LED status	Status
Transmitter		
Disconnect the Transmitter Press and hold the Pairing Button while inserting the Transmitter to iPhone/iPod and hold for 8 seconds	Transmitter LED fast blinks	Transmitter has been reset and is in pairing mode
ZiiSound D5x		
Return the speaker to Standby by pressing the Power ON/ Standby button. Press and hold Power button for 10 seconds.	CONNECT LED and LINK LED blinks twice and turns off. This indicates a successful Factory reset.	Powered On. Speaker *Bluetooth* device list and Link system memory cleared. Ready for next user action.

Note: The above can also be applied to LEFT and CENTER speaker to clear *Bluetooth* paired device memory and Link configurations should the need arise.

Section 5 : Tips, Tricks and FAQ

Perform the following trouble-shooting steps before sending it for servicing.
To download the user guide or find out more information about our product, please refer to support.creative.com

5.1 Speaker FAQ

What are the indicators that indicate my ZiiSound D5x is Powered ON.

A For the master speaker, the Volume LED indicator are lit when the ZiiSound D5x is powered ON. This is the best indication your speaker is Powered ON.

B For the other linked speakers, press and hold the Power ON/Standby button to initiate speaker identification mode. This will indicate what channel mode the speaker is in.

Is there any power saving features from the ZiiSound D5x?
Yes, the RIGHT Master speaker will enter standby automatically after more than 10 minutes of zero activity from both, the *Bluetooth** and AUX-IN** sources. It will also instruct other speakers and subwoofer linked to the RIGHT master speaker to enter standby to save power.

* Power saving mode only applicable when no *Bluetooth* connection is detected for 10 minutes.

** Power saving mode only applicable when there is no audio on the AUX-IN input.

5.2 *Bluetooth* FAQ

There's no *Bluetooth* link between my device and the ZiiSound D5x. What should I do?

- Delete the "ZiiSound D5x" or "ZiiSound D5x system" name entry from your *Bluetooth* device paired memory list and perform the steps in Section 1.5 (Enjoy audio from other *Bluetooth* devices) to re-pair your device with ZiiSound D5x.
- Position them within 1 meter or closer to each other if you experience pairing difficulties
- Ensure that both your *Bluetooth* device and ZiiSound D5x are not connected to any other devices

***Bluetooth* link is established and paired between the devices but there's no music. What should I do?**
With some built-in *Bluetooth* Stereo enabled computers, 3rd party USB *Bluetooth* dongles or other devices, you may be required to manually specify/ setup the audio output as ZiiSound D5x, e.g., (under sound and audio devices section on your computer's operating system) Please consult your manufacturer's documentation for further information

5.3 LINK Tips and Tricks

How to identify which speaker is the LEFT, CENTER, RIGHT speaker.

- Press and hold the Power ON/Standby button located at the rear of the speaker. The Link LED indicator will light its respective LED Channel it was configured for.

Link LED Status Indicator

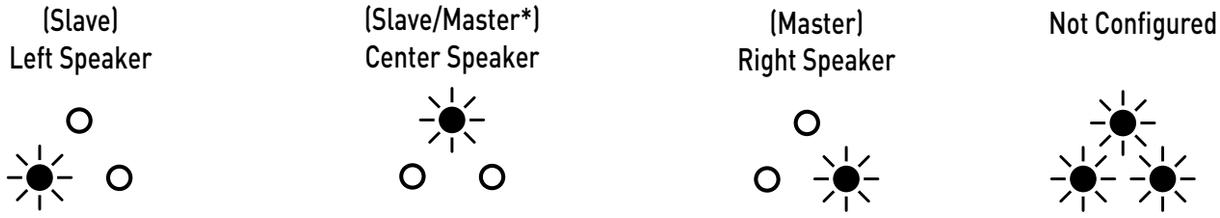

My LEFT and CENTER Channel D5x does not respond to my actions on either buttons or *Bluetooth* connections when they are in LINK mode.

- This is normal. The D5x in slave mode does not respond to any button (except the Power ON/Standby to indicate the identity of the speaker via LED indication) as they are receiving cues from the RIGHT Master speaker. This includes *Bluetooth* connection, AUX-IN input and the Volume Touchpad.

Can I add more speakers or remove speakers from a 2.1 Setup?
Yes you can. However you would need to clear the link system on all the speakers and subwoofer and re-link them again. Please refer to section 4.3 Reset to factory setting / clear Link system and section 2.1 or 2.2 to reconfigure your system again. For operations on the ZiiSound DSx wireless subwoofer, please refer to its user manual for more information.

I cannot re-connect my speakers together. All that is shown is all the LEDs blinking in unison and going off after 1 minute. What should I do?
This is an error indicator to indicate that one of the links are not present in the defined previous setup. There are 2 ways to troubleshoot.

a) Power ON all your speakers and press the LINK TouchPad / Button again to attempt to link the speakers together. Ensure that the Subwoofer have their mains Powered ON.

b) Return to factory default settings to clear Link system configuration for all your speakers and subwoofer involved and re-link them again.

European Compliance

This product conforms to the following:
EMC Directive 2004/108/EC.
Mains operated products for the European market comply with Low Voltage Directive 2006/95/EC and Commission Regulation(s) Implementing Directive (2005/32/EC).
Communication /RF wireless products for the European market comply with R&TTE Directive 1999/5/EC.

CAUTION:

To comply with the Europe CE requirement, this device must be installed with CE certified computer equipment which meet with Class B limits.
All cables used to connect this device must be shielded, grounded and no longer than 3m in length. Operation with non-certified computers or incorrect cables may results in interference to other devices or undesired effects to the product.

MODIFICATION:

Any changes or modifications not expressly approved by Creative Technology Limited or one of its affiliated companies could void the user's warranty and guarantee rights.

DECLARATION OF CONFORMITY

According to R&TTE Directive (1999/5/EC)

Company Name	:	Creative Technology Ltd
Company Address	:	31, International Business Park Creative Resource, Singapore 609921

Declare under our sole responsibility that the product(s):

Product Name	:	ZiiSOUND D5x
Product Model Number	:	MF8115
Dongle Model Number	:	MZ0450
External Power Adapter Model Number	:	GPE602-150350W(ADC0000005810)
Intended Use	:	Office and Home Usage
Restrictive use	:	Nil

To which this declaration relates are in conformity with the following standard(s):

Radio	:	EN 300 328 V1.7.1: 2006 EN 300 440-1 V1.6.1:2010 EN 300 440-2 V1.4.1:2010
EMI/EMC	:	EN 55013:2001 +A1:2003 +A2:2006 EN 55020:2007 EN 55022: 2006 + A1: 2007 EN 61000-3-2:2006 + A1:2009 + A2:2009 EN 61000-3-3:2008 EN 301 489-1 V1.8.1: 2008 EN 301 489-3 V1.4.1: 2002 EN 301 489-17 V2.1.1: 2009
Health & Safety	:	EN 60065: 2002 + A1: 2006 + A11: 2008 + IEC Guide 112 EN 62311: 2008
Energy Use	:	Regulation (EC) No. 278/2009 Regulation (EC) No. 1275/2008

Supplementary Information:

- Notified Body Number 0890
- External Power supply unit is bundled with the product and not sold separately.
- The receiver portion of this product is a Category III device, as specified in EN 300 440.

Technical documentation for this product(s) is retained at the following address

Company Name	:	Creative Technology Ltd
Company Address	:	31, International Business Park Creative Resource, Singapore 609921

CE 0890

EN Hereby, Creative Technology Ltd. declares that this wireless speaker is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

FR Par le présent document, Creative Technology Ltd. déclare que ce haut-parleur sans fil est conforme aux exigences essentielles et autres dispositions de la directive 1999/5/CE.

DE Hiermit erklärt Creative Technology Ltd., dass dieser Wireless-Lautsprecher die grundlegenden Anforderungen und weitere wichtige Bestimmungen der Richtlinie 1999/5/EG erfüllt.

IT Creative Technology Ltd. dichiara che l'altoparlante wireless è conforme alle prescrizioni essenziali e alle disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

ES Por la presente, Creative Technology Ltd, declara que este altavoz inalámbrico cumple con los requisitos esenciales y otras cláusulas de la directiva 1999/5/EC.

NL Creative Technology Ltd verklaart hierbij dat deze draadloze luidspreker voldoet aan de vereisten en andere relevante voorwaarden van de richtlijn 1999/5/EG.

PT A Creative Technology Ltd., declara pelo presente que esta coluna sem fios está em conformidade com os requisitos essenciais e outras disposições relevantes da Directiva 1999/5/CE.

SV Härmed intygar Creative Technology Ltd. att denna trådlösa högtalare uppfyller viktiga krav och bestämmelser i EU-direktivet 1999/5/EG.

NO Creative Technology Ltd. bekrefter med dette at denne trådløse høyttaleren overholder kravene og andre relevante forskrifter i direktiv 1999/5/EF.

DA Creative Technology Ltd. erklærer hermed, at denne trådløse højtaler overholder de obligatoriske krav samt øvrige relevante bestemmelser i direktiv 1999/5/EF.

FI Creative Technology Ltd ilmoittaa, että tämä langaton kaiutin vastaa direktiivin 1999/5/EY olennaisia vaatimuksia ja muita ehtoja.

CZ Společnost Creative Technology Ltd. prohlašuje, že tento bezdrátový reproduktor splňuje základní požadavky a další související ustanovení nařízení 1999/5/EC.

PL Firma Creative Technology Ltd. niniejszym oświadcza, że ten głośnik bezprzewodowy jest zgodny z podstawowymi wymaganiami i innymi właściwymi postanowieniami dyrektywy 1999/5/WE.

RU Настоящим компания Creative Technology Ltd. заявляет, что данный беспроводной динамик соответствует необходимым требованиям и прочим применимым положениям Директивы 1999/5/EC.

HU Ezennel a Creative Technology Ltd. kijelenti, hogy ez a vezeték nélküli hangszóró megfelel az alapvető követelményeknek, valamint az 1999/5/EK számú irányelv egyéb vonatkozó elvárásainak

EL Με το παρόν έντυπο, η Creative Technology Ltd, δηλώνει ότι αυτό το ασύρματο ηχείο συμμορφώνεται με τις βασικές προδιαγραφές και τις λοιπές σχετικές προϋποθέσεις της οδηγίας 1999/5/EC.

LT „Creative Technology Ltd.“ pareiškia, kad belaidis garsiakalbis atitinka esminius direktyvos 1999/5/EB reikalavimus ir kitas atitinkamas jos nuostatas.

SK Spoločnosť Creative Technology Ltd. týmto deklaruje, že tento bezdrôtový reproduktor je v súlade so základnými požiadavkami a ostatnými relevantnými ustanoveniami Nariadenia 1999/5/EC.

© 2011 Creative Technology Ltd. All rights reserved. Creative, the Creative logo, Zii and ZiiSound are trademarks or registered trademarks of Creative Technology Ltd in the United States and/or other countries. iPod, and iPhone are trademarks of Apple, Inc., registered in the U.S. and other countries. The *Bluetooth*® word mark and logo are owned by the Bluetooth SIG, Inc. and any use of such marks by Creative Technology Ltd is under license. apt-X is a registered trademark of APT licensing Ltd. All other trademarks are the property of their respective owners and are hereby recognized as such. All specifications are subject to change without notice. Actual product may differ slightly from images shown.

PN 02MF811500001 Rev B